S6R/S8R support on Ersky9x

Ersky9x supports both a dedicated menu and a script function for configuring the S6R/S8R receivers.

Script method

To run a script on ersky9x, press MENU LONG to get the main popup options and select "Run Script":

IS	Model Select Model Setur	
	Last Menu Radio Setur	00
ΤH	Statistics Notes	
Ê	Help Aug Scotes	ĪD†

Then, from the menu select the file S6R.bas:



If the file is not shown, go to <u>www.er9x.com</u>, download the script file, unzip it and copy it to a SCRIPTS directory on the SD card.

The script will run and attempt to load the wing and mounting type settings:

900 Win9 type: Mountin9 type:	Normal Horz
Pins toward tai Label is facing sky	l the

To change the values, press menu to enable editing, then adjust to the required setting by using the left and right buttons (or encoder). Press menu again to end editing, the new value will be sent to the receiver.

Access the remaining settings by pressing MENU LONG:

883 -	
<u>SXf</u> unctions	- anen e
Quick Mode:	Disphie
CU5 mode	
ens node	L VOL
спо моде	
Hif direction:	
ELE direction:	
RUD direction	

As it takes some time to read all the values, a progress bar will show at the top of the screen while they are being read.

The settings may be edited in the same way as the wing type and mounting.

It is not possible (currently) to carry out the accelerometer calibration from the script.

Menu method

There is a dedicated menu for the S6R/S8R. This is accessed by selecting the "Statistics" option from the main popup, then stepping LEFT a few times to get the the S6R menu:

SIGR	Confi9.	127 13

From this menu, you may step down to individual items. Each item will show as "-----". It is necessary to request the value to be read by pressing menu:



Then the item value will be shown:

S6R Config.	12/13
Win9 type	Normali

The value may then be edited, and a LONG press of menu is required to write the value back to the receiver:



When selecting the mounting position, a graphic is displayed showing the chosen position:

S6R Config.		12/13
Mounting		
S6R <-Headin9		
S6R Config.		12/13
Mounting		
SER	Mer	

Typical selection options:

86R Config. Ail2 Dir.	12713 Normali
S6R Config.	12/13
Aux2	enable

The accelerometer calibration may be carried out, with a graphic displayed to show each of the six required positions:

